

PULSAR

INSTRUCTION MANUAL FOR WATCH CALIBRE
5Y67



WARNING



THIS PRODUCT CONTAINS A BUTTON BATTERY

If swallowed or placed inside any part of the body, the battery can cause severe or fatal injuries within 2 hours or less.

Button batteries are hazardous whether new or used. Keep batteries out of reach of children.

If you think the battery may have been swallowed or placed inside any part of the body, seek immediate medical attention. Contact the Australian Poisons Information Centre immediately on 13 11 26 (New Zealand 0800 764 766) for 24 / 7 fast, expert advice.

PULSAR

CAL. 5Y67

 
RETROGRADE DAY INDICATOR

- Time indicates by the hour, minute and second hands
- Date indicates by the date hand
- Day of the week indicates by the day hand
- The 24-hour hand indicates the hour in the 24-hour indication

ENGLISH

DISPLAY AND CROWN

English

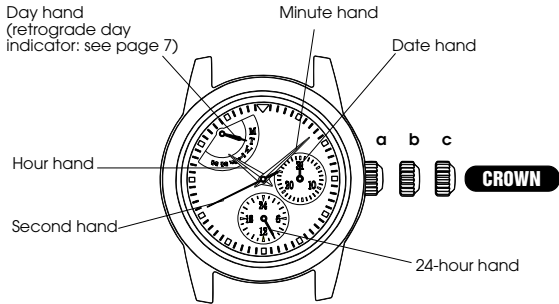

a. Normal position

b. First click

c. Second click

**Orientation of the retrograde display may vary depending on the model.*

SCREW DOWN CROWN

[for models with screw down crown]

- 1 Turn Crown counterclockwise until you no longer feel the threads turning.
- 2 Crown can be pulled out.



Locking the crown

 
- 1 Push Crown back in to normal position.
- 2 Turn Crown clockwise while pressing it lightly until tight.



DAY AND TIME SETTING

English


Day hand

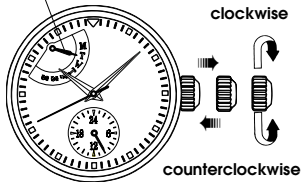

CROWN

- 1 Pull out to second click when Second hand is at the 12 o'clock position.
- 2 Turn clockwise to advance Hour and Minute hands until Day hand is set to the desired day of the week.
- 3 Turn to set the time.
- 4 Push the crown back into the normal position in accordance with a time signal.

 DATE SETTING

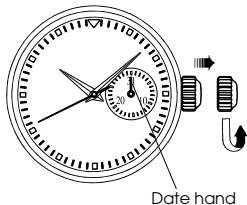

CROWN

- 1 Pull out to first click.
- 2 Turn counterclockwise to set Date hand to the desired date.
- 3 Push in.

NOTES ON OPERATING THE WATCH

TIME/DATE SETTING

- To advance the day hand quickly, turn back the hour and minute hands 4 to 5 hours beyond the point the day changes (between 11:00 p.m. and 4:00 a.m.), and then advance them again until the day hand is set to the next.

**The day hand will not move back by turning the crown counterclockwise.*

- After the day hand reaches the last day of the week, turn the crown clockwise and the hand will return to the first day of the week (retrograde day indicator).
- When adjusting the day hand, turn the crown slowly.
- The 24-hour hand moves correspondingly with the hour hand.
- When setting the hour hand, check that the 24-hour hand is correctly set.
- When setting the minute hand, advance it 4 to 5 minutes ahead of the desired time and then turn it back to the exact time.

DATE SETTING

- Do not set the date hand between 9:00 p.m. and 1:00 a.m. Otherwise, it may not turn properly.
- While setting the date hand, check that it moves properly in one-day increments.
- It is necessary to adjust the date on the first day after a 30-day month and February.